



**FB-Sentry
WD350**


IS0412
Rev A ECR865 7/2019

Installation

Location:

Be sure to locate the WD350 MTU so the internal GPS and Cellular antennas have a clear view of the sky. The orientation of the MTU does not matter as long as it is not installed behind or below materials that can block radio transmissions.

The preferred mounting is with the harnessing coming from the bottom of the MTU with appropriate strain relief.

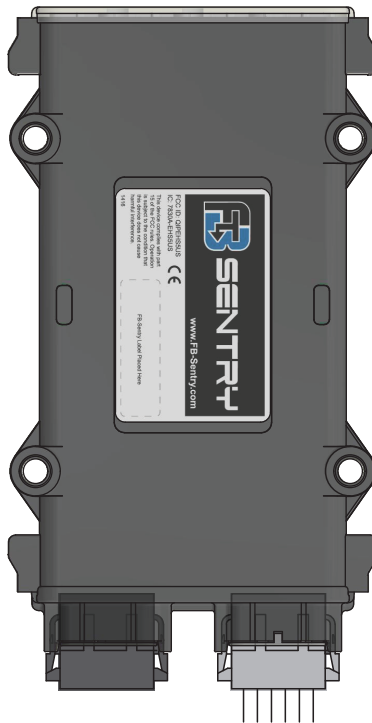


Note: Materials such as metal can interfere with the radio transmissions used by the MTU and can reduce service reliability. These types of materials should be avoided. Materials like fiberglass allow radio signals to transmit without interference. It is OK to mount behind or below these types of materials.

The MTU should be installed in a dry area, away from the elements. This unit is rated IP-66 and protected from Dust and Splashing water.

Installation

Locate the 2 12-pin Deutsch connectors. Insert the gray connector into the gray connection on the MTU.

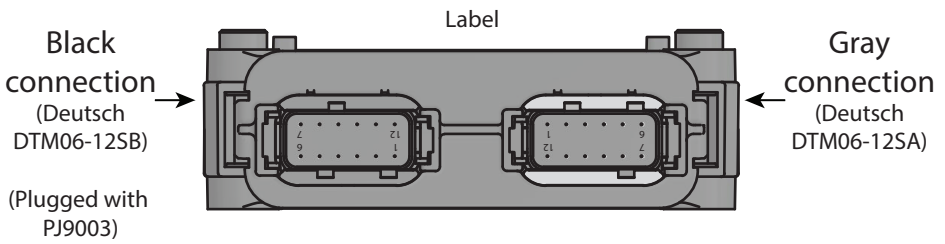

Wire Connection

Gray Connector


Bilge Pump #1	To Bilge pump counter #1 (pos) (Optional)	1	Blue
Battery #2	To Battery #2 (positive)	2	Violet/White
Entry Alert	To door or motion sensor (NO) (Optional)	3	Brown
Ground	To negative side of battery or Vessel Ground	4	Black
Battery #1	To Battery #1 (positive)	5	Violet
Bilge Pump #2	To Bilge pump counter #2 (pos) (Optional)	6	Gray
High Water	High water switch (to ground) (Optional)	7	Orange
Not Used	Not used	8	Plug
Not Used	Not used	9	Plug
Not Used	Not used	10	Plug
Not Used	Not used	11	Plug
Not Used	Not used	12	Plug

Connect the Violet Wire (pin 5 - Gray connector) to the main battery (12 or 24 vDC ready) or an non-switched power source with in-line fuse (3 A) installed.


Connect the Black Wire (pin 4 - Gray connector) to the negative side of the battery or vessel ground.

Harness Connections

HN0925

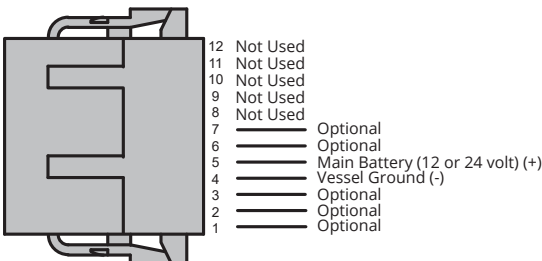

Power Harness Gray Connector

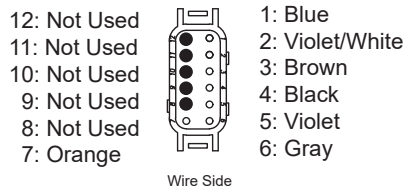


Wire Side

LED Indicators

With power applied check for blinking LED's

Amber for GSM Signal

Green for GPS fix

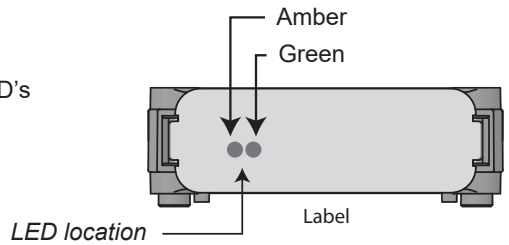

Note: To view the LED look inside the clear plastic part of the case opposite the connectors. The LEDs are located inside the case.

To be fully operational both the Green and Amber LED must be solid (on).

The tables below identify the meaning of the blinking sequence for diagnostic purposes.

LED #1 (Cellular signal - Amber)

Off	Modem Off
Slow Blinking (1 Hz)	Comm On - Searching
Fast Blinking (3 Hz)	Network Available
Alternates from Solid to Fast Blink (1 per second)	Registered but no Inbound acknowledgment
Solid (On)	Registered and Received Inbound acknowledgment.

LED #2 (GPS signal - Green)

Off	GPS Off
Slow Blinking (1 Hz)	GPS On - Searching
Fast Blinking (3 Hz)	GPS - Time Sync
Solid (On)	GPS - Fix

Activation

Go to www.fb-sentry.com


Click on the “Sign Up” link.



The screenshot shows the login page for FB-Sentry. At the top is the logo and the text "Welcome to FB-Sentry!". Below this are two input fields: "Email" and "Password". There are two yellow buttons: "Sign in" and "Sign in with Google". At the bottom right, there are two links: "Forgot password" and "Sign up". An arrow points from the "Sign up" link to the text "Sign Up" on the right side of the image.

“Sign Up”


Enter your email and password at the prompts.

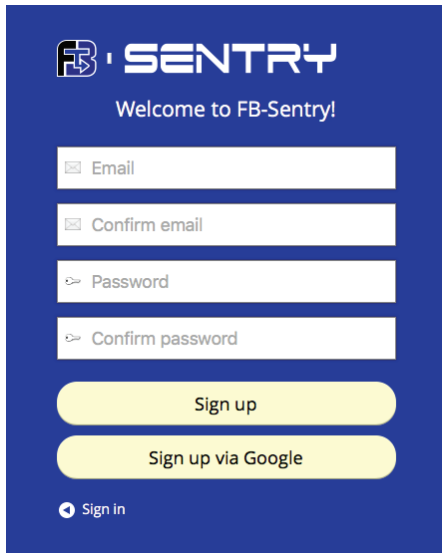

The screenshot shows the sign-up page for FB-Sentry. At the top is the logo and the text "Welcome to FB-Sentry!". Below this are four input fields: "Email", "Confirm email", "Password", and "Confirm password". There are two yellow buttons: "Sign up" and "Sign up via Google". At the bottom left, there is a link "Sign in".

From your email, record the verification code.

Enter verification code at prompt.

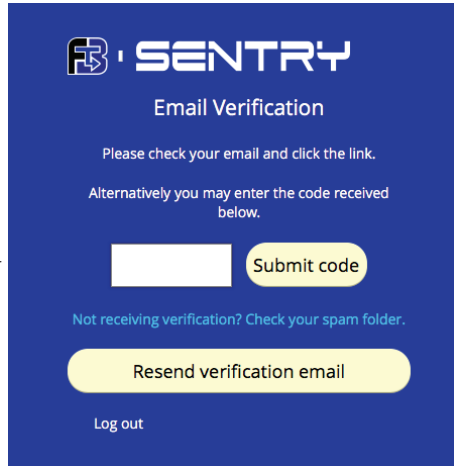


Enter your boat name.

Enter product key. The product key can be found on the MTU on the brand label.



The product key is also recorded on the label to the right.

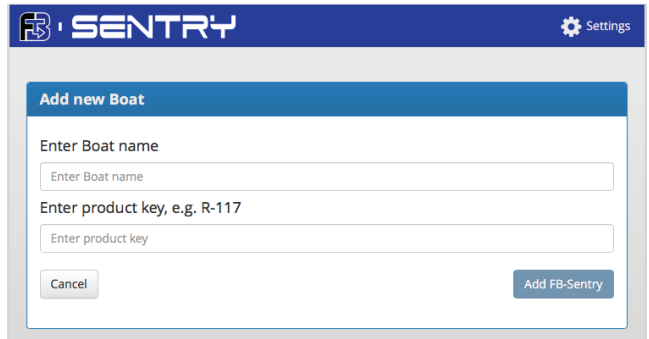

Activation Serial Number

Follow the remaining prompts to complete activation

Web Application

For your convenience you can add the web application (FB-Sentry) to your home screen.

iOS

Launch the Safari browser and navigate to www.fb-sentry.com. Tap the share button on the browsers tool bar.



Android

Launch Chrome for Android and open the website www.fb-sentry.com. Tap the menu button.



Both

Tap the Add to Home Screen icon in the menu. Name the icon shortcut and save.

Additional Monitoring

Bilge Pumps

If bilge pumps are to be monitored connect bilge pump 1 via the Blue Wire (Pin 1 - Gray connector) to positive side of pump #1. If a second bilge pump is to be monitored connect the Gray Wire (Pin 6 - Gray connector) to the positive side of the bilge pump #2.

High Water Detection (Optional - Additional parts are required.)

If a High Water Detection is required connect the Orange Wire (Pin 7 - Gray connector) to the ground side of the FB-Sentry High Water/Float Switch Part # SW0052.

Entry Door Monitoring (Optional - Additional parts are required.)

If entry monitoring is required connect the Brown Wire (Pin 3 - Gray connector) to the FB-Sentry Entry Door Switch Sensor Monitoring Kit (will do 2 doors, hatches, etc.) Part # SW0049 and follow the installation instructions

Shore Power Monitoring (Optional - Additional parts are required.)

If shore power is to be monitored connect the White Wire (Pin 8 - Black connector) and Black Wire (Pin 7 - Black connector) to the FB-Sentry Shore Power Sensor Part # SN0073 and follow the installation instructions.

Temperature Monitoring (Optional - Additional parts are required.)

If temperature monitoring is required connect the Green/Black Wire (Pin 1 - Black connector) to the Black wire (Sender), Red/Violet Wire (Pin 9 - Black connector) to the Red wire (Sender) and Yellow Wire (Pin 12 - Black connector) to the Yellow wire (Sender) to the FB-Sentry Temperature Sensor Part # SN0072 and follow the installation instructions.

Remote Digital Switching - Outputs are switched to ground (Optional - Additional parts are required.)

The FB-Sentry MTU will sink 150mA's to turn on various switches.

Device #1 (relay) connect the Tan/White Wire (Pin 2 - Black connector)

 
Device #2 (relay) connect the Tan/Black Wire (Pin 10 - Black connector)

Device #3 (relay) connect the Tan/Blue Wire (Pin 11 - Black connector)

Connect to a FB-Sentry Control Relay(s) (12 vdc.) Part # SW0050 or FB-Sentry Control Relay(s) (24 vdc.) Part # SW0051.


HN0926 Accessory Harness Black Connector

- 12: Yellow
- 11: Tan/Blue
- 10: Tan/Black
- 9: Red/Violet
- 8: White
- 7: Black




Wire Side

- 1: Green/Black
- 2: Tan/White
- 3: Not Used
- 4: Not Used
- 5: Not Used
- 6: Not Used

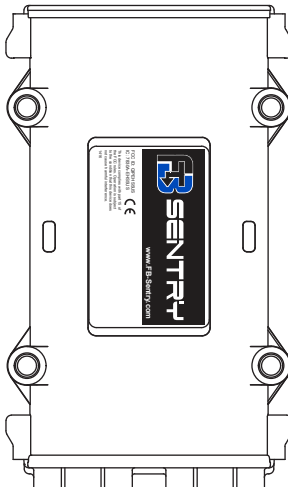

HN0925 Power Harness Gray Connector

 - 12: Not Used
- 11: Not Used
- 10: Not Used
- 9: Not Used
- 8: Not Used
- 7: Orange





Wire Side

- 1: Blue
- 2: Violet/White
- 3: Brown
- 4: Black
- 5: Violet
- 6: Gray



 Optional

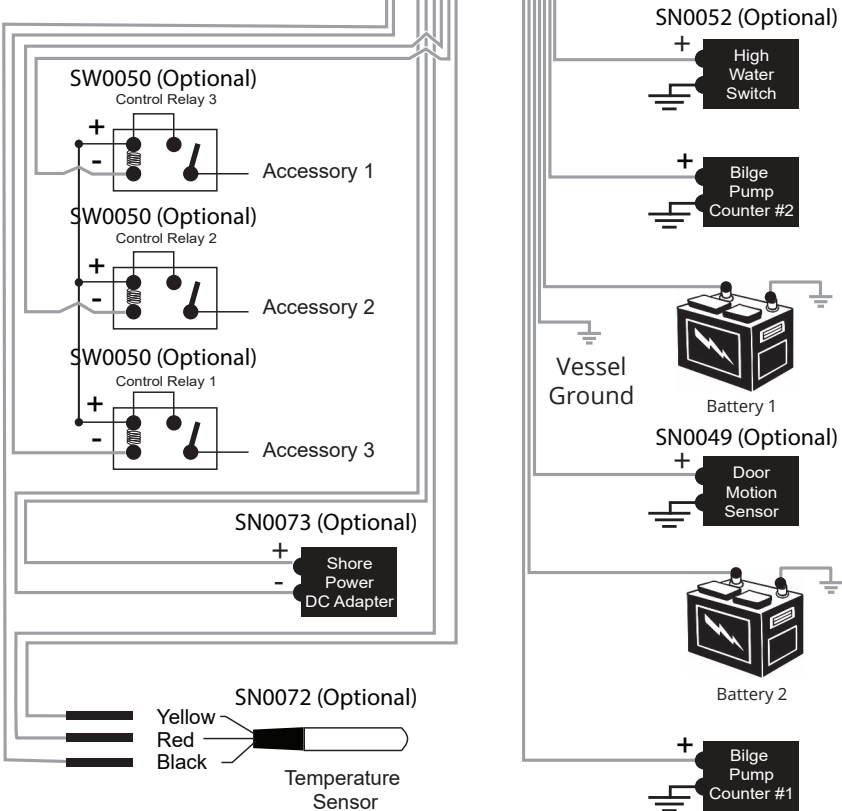



Faria Beede Instruments, Inc.
North Stonington, CT 06359
860.848.9271
Made in the USA